

HARKEN®

INSTALLATION SHEET

394, 433 Dinghy Clew Hook

N15W24983 Bluemound Road • Pewaukee, WI 53072 U.S.A.

Telephone: (262) 691-3320 • Fax: (262) 701-5780

Web: www.harken.com • Email: harken@harken.com



Strictly follow all instructions to avoid an accident, damage to your vessel, personal injury or death. See www.harken.com for additional safety information.

Install Dinghy Clew Hook

Use provided line to tie clew hook to boom with open end of hook pointing to port (see photo below). Wrap line around boom and through clew hook three times. Tie a very tight “square knot.” Tape ends close to knot. Line may stretch with time. Retie as needed. Lead outhaul line through closed loop of hook as shown at right and lead the outhaul line down the starboard side as shown at right.



Hook-/Unhook Sail



Hooking Sail: Ease vang and outhaul. Lift boom and pass hook through clew grommet. First trim outhaul and then vang.

Un-Hooking Sail: Ease vang and outhaul. Lift boom with your right hand and push hook out with your left hand.

Add Block to Dinghy Clew Hook

To add more outhaul power, attach Harken 404 block to hook “eye”.

To install, slip block onto straight end of hook. Position at eye as shown. Reeve outhaul line as shown in photo below.



Tip: Spray boom with dry lubricant like McLube® to make outhaul adjustment easier.

Maintenance

Flush block and hook frequently with fresh water.

Warranty

For additional safety, maintenance and warranty information see www.harken.com/manuals or the Harken® catalog.