

EX3010



FLOATING *REGATTA* TIMER

INSTRUCTION MANUAL:

1. Press MIN to set desire countdown time.
 2. Press START/STOP to begin countdown.
 3. To pause or resume countdown, press START/STOP again.
 4. To synchronize during countdown on the full minute press SYNC.
 5. The alarm beeps every minute, every 10 sec the last minute, every second the last 10 seconds.
 6. To switch on/off sound press the sound button on the back of the timer.
 7. On the starting signal the display will return to last entered time.
 8. To clear the memory, press both MIN and SYNC.
- The timer will auto shut-off after 60 min idle time.
 - Change battery when display becomes dim.
 - Grease seal when replacing battery
 - This unit meets the waterproof requirements for IP67standard.

WARRANTY CARD:

This product is warranted for a period of 2 years after purchase. If any defect due to faulty materials or workmanship occurs within this period Optiparts will repair or replace the product at its expense. A defective product should be returned to the dealer or shop where purchased accompanied by a receipt and this warranty card. The warranty is not valid if a defect is caused by incorrect use or poor maintenance.



WINDSIGN IS A TRADEMARK OF OPTIPARTS MARINE EQUIPMENT

WINDSIGN
SAILING.COM