

D20A/D30A CONTROL PANEL

Quick guide



A	Compressor error LED
B	ON/STANDBY button
C	FREEZER MODE button
D	NIGHT MODE button
E	Cooling level indicators
F	Cooling level set button

On/Standby

To switch on the refrigerator, push the on/off switch shown in the figure for 1 second.
At this time all the functions are active.

- i** To secure optimal performance, level your vehicle before operating the refrigerator
- i** For optimal performances, switch on the refrigerator at least 8 hours before placing food
- i** We advise to clean the inside of the refrigerator properly, before using the refrigerator.

Fridge Mode

In fridge mode you can choose 4 levels of temperature, to change set push the button F.

From left to right:

Set 1: 0-2°C

Set 2: 2-4°C

Set 3: 4-6°C

Set 4: 6-8°C

Freezer mode

To turn on the Freezer mode, hold down the button C for one second.
The 4 blue LEDs will light up and stay on at the same time.

During this feature is active, it's not possible change the cooling level.

To turn off Freezer mode at any time, push the button for one second and the cooling level will return to the last set.

With Freezer mode active, the rotation speed of the compressor is the highest.

Night mode

To activate Night mode, hold down the corresponding button for one second.
The 4 blue LEDs will light up alternately from left to right.

During operation of this mode, it is not possible to change the cooling level.

After 10 hours of operation, Night mode will stop automatically and the cooling level returns to the last set.

To turn off Night mode at any time, hold down the corresponding button for one second.

With Night mode active, the rotation speed of the compressor is the lower, in this way noise and electrical consumption are minimized.



The temperatures inside the refrigerator and the refrigerator will go up by activating this mode. Only activate it when you need to save energy.