

OPTIPARTS

MARINE EQUIPMENT



WINDESIGN

DAGGERBOARD BUNGY

Shockcord

Black line

Clear tubing

Red tubing

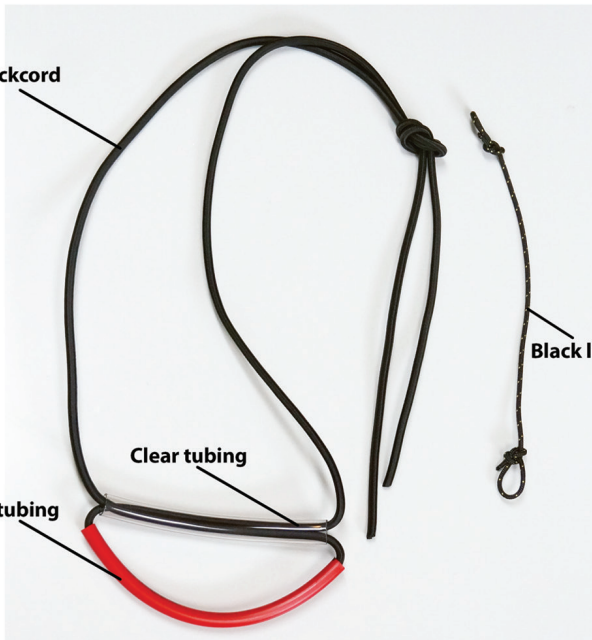


Photo credits: Matias Cappizzano



WWW.OPTIPARTS.COM

OPTIPARTS

MARINE EQUIPMENT



WINDESIGN

Installation step by step:

1. Pass the shockcord through the clear tubing.
2. Pass the shockcord through the red tubing.
3. Pass the shockcord through the clear tubing again.
4. Pass the shockcord through the 1st loop in the black line.
5. Pass the shockcord through the eyelet on the front end of the daggerboardcase.
6. Tie the end of the shockcord to the hikingstrap.
7. Pull the blackline through the space between the daggerboard and the midshipframe.
8. Pass the shockcord through the 2nd loop in the black line and pass the shockcord for the 2nd time through the eyelet.
9. Tie the end of the shockcord to the 2nd hikingstrap.



WWW.OPTIPARTS.COM